



Designed by Stan Buddenbohm
 Drawn by BK

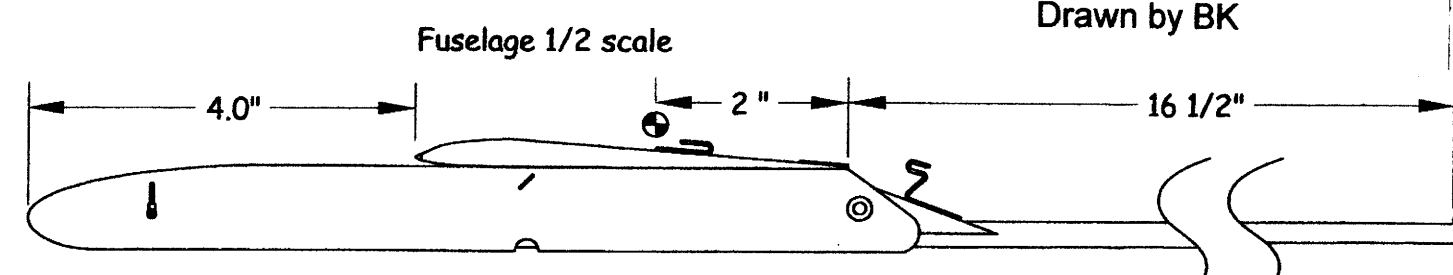

Stan Buddenbohm's TLG fuselage with timer
 NM 4" or short as you dare

At the bottom of the tailboom, bend a finger width portion of the rudder TE to add about 1/32" to 1/16" of right rudder

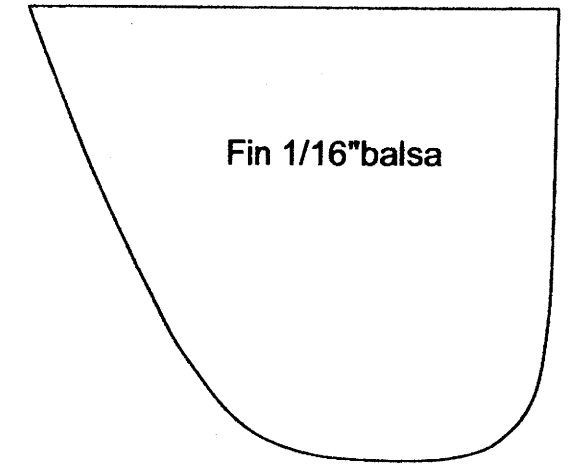

Turn About

To produce the "Flat" hold a small sanding block at the same angle all the way from tip to tip- the flat will get smaller as the wing gets thinner

